








<b>Why</b>	To ensure cleanliness and prolong the life of the ABS	
<b>Time required</b>	5 minutes to prepare	30 minutes to complete
<b>Time of day</b>	At close or non-peak periods	For 24-hour restaurants: during low-volume periods
<b>Hazard icons</b>	 Chemicals  Electricity  Manual Handling  Moving Parts  Sharp Objects/Surfaces  Slippery Floors	

**Tools and Accessories:**



Nylon Pot Brush



Sanitized Towels



McD HA Detergent Spray Bottle



McD DR Sanitizer Spray Bottle



McD SG Stainless Steel Cleaner.




Paper Towels

**Procedure**

**1 Switch the ABS to MANUAL Mode:**

On the Left hand Display, press the MANUAL Button.

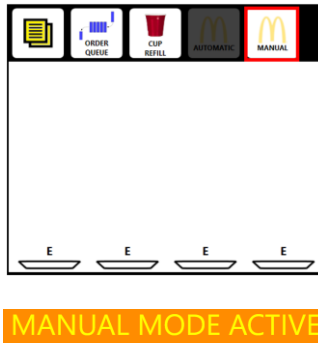

**2 Tools Required**

- Nylon Pot brush
- Sanitized towels
- McD HA detergent Spray Bottle
- McD DR sanitizer Spray Bottle
- McD SG Stainless Steel Cleaner.
- Paper towels.



**3 Gripper Pad Cleaning.**

Wipe dirt and dust from the inside faces of the gripper pads with McD HA detergent solution and wipe dry with a soft, sanitized cloth



**4 Disassemble the Ice Chute.**

Hold the ice chute cover and push up until you hear a click and the side latches are disengaged.




# Clean and sanitize the ice chute and all external surfaces (continued)

- 5 Lift off the Ice Chute cover and set it aside for cleaning.



- 6 **Cleaning the Ice Chute.**

Clean the interior of the ice chute and cover with a long handled nylon pot brush.

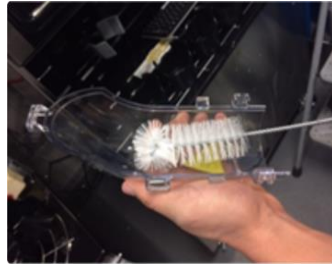

Use McD HA detergent and warm water to clean, and rinse with clean potable water.

- 7 **Sanitize the Ice Chute Cover.**

Spray the inside of the ice chute cover with McD DR sanitizer solution and allow to air dry.



- 8 **Sanitize the Ice Chute.**


Spray the backside of the ice chute with McD DR sanitizer solution and allow to air dry.



- 7 **Reassemble the Ice Chute.**

**Note: Make sure the cover side latches mate flush with the ice chute base before sliding down.**

Carefully insert the ice chute cover and slide down to fully engage.

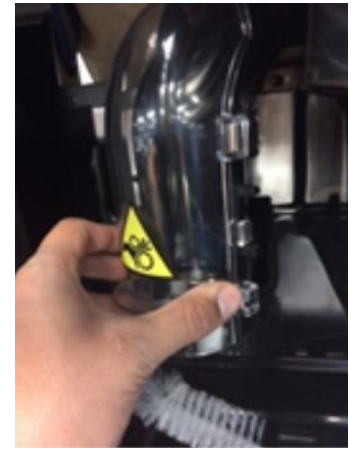

- 8 **Clean exterior surfaces.**

Wipe dirt and dust from all exterior surfaces with McD HA detergent solution and wipe dry with a soft, sanitized cloth. Wipe the turret door, backsplash panel, sidewall and exterior panels.

**CAUTION: Do NOT wipe displays with solvents or cleaning agents.**



- 9 **Clean exterior surfaces.**

Clean and wipe the turret door with a soft and non-abrasive cloth.



# Clean and sanitize the ice chute and all external surfaces (continued)

## 10 Clean lid storage.

Wipe dirt and dust from the lid dispensers with McD HA detergent solution, and wipe dry with a soft sanitized cloth.



## 11 Clean exterior surfaces.

Clean and wipe both display panels. Gently wipe the touch screens with a clean, moistened cloth if needed.



**CAUTION:**  
Do NOT wipe displays with solvents or cleaning agents.

## 12 Clean exterior surfaces.

Clean and wipe the turret wall surface.



## 13 Clean exterior surfaces.

Clean and wipe the lower exterior panels below the drip tray.



Apply McD SG stainless steel cleaner to finish the external panels.

## 14 Switch the ABS to AUTOMATIC Mode.

Press the AUTOMATIC Button to return the ABS in Automatic mode.

